

PXF Lighting 73 Jutrzenki Street 02-230 Warsaw, Poland

≅ +48 22 33 44 000, **글** +48 22 33 44 033



Installation Instructions PISA LED IP54 / ROMA LED IP54











220-240V/50-60Hz LED

Power	Luminaire's dimensions and weight (Dimensions of the installation hole)	
	595x595 (580x580)	295x1195 (280x1180)
38W	4,6kg	-
43W	-	5,4kg

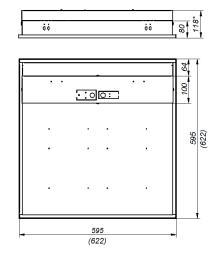

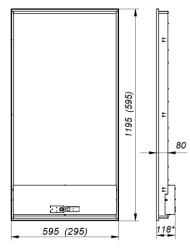

The luminaire's height 118* is for the version with an emergency module.

- a) Deactivate power in the circuit which the luminaire is going to be connected to.
- b) Carefully take the luminaire out of the package.
- c) Installation of luminaire Pisa led:
 - cut out an installation hole in the ceiling with the dimensions given in the box above,
 - tilt back the plate with the connection block,
 - pull the feeding cable through the gland,
 - connect the feeding cable as indicated on the connection block,
 - tilt back the springs on the sides of the luminaire and install the device in the ceiling.
- d) Installation of luminaire Roma led:
 - pull a plate with a cube;
 - put the feeding cable through the hole in a base of a fixture;
 - connect wires as it's shown on a cube;
 - install a fixture in suspended ceiling.

Important warnings:

- the luminaire may be connected to the mains only by authorized personnel,
- any manipulation inside the luminaire when the power is activated causes the risk of electric shock,
- the manufacturer cannot be held responsible for any flaws resulting from non-compliance with these instructions,
- the manufacturer reserves the right to change the construction of the product,
- do not install the luminaire in places without sufficient air circulation,
- $\hbox{- in order to guarantee safe luminaire's functioning, please follow the installation instructions.}\\$

