

# Installation manual **ValkDouble**





## Index

Disclaimer	Page -
Select wind area	Page -
Required ballast	Page 00a
Required tools	Page 00b
Required materials	Page 00c
General dimensions	Page 01
Placing roof carriers	Page 02
A-frame connector	Page 03
Push rods	Page 04
Aluminium profile	Page 04.2
Aluminium profile	Page 05
Push rods	Page 06
Ballast	Page 07
Placing panels	Page 08
Placing panels	Page 08
Cable clamp	Page 09

## Pay attention

- This manual is not project specific.
- This manual is not legally binding.
- No rights may be derived from this installation manual.
- See **datasheet ValkCableCare** for cable management.
- The system is placed in the middle zone of the roof.





## Disclaimer

This installation manual composed with the greatest possible care and contains specific information for correct and safe installation of the solar mounting system, including installation drawings and ballast tables, calculated according to the Eurocode regulations. The standard values used for input of these calculations, always need to be checked in advance by the installer for correctness. In case values are different, a project case specific calculation needs to be made. Please contact Van der Valk Solar Systems in this situation.

At all times all currently applicable structural, safety and building regulations must be observed prior to installation of the solar mounting system. The building in question will be subject to a load as a result of the solar mounting system installed/mounted. Solar mounting systems installed on roofs will be exposed to wind and snow loads. Therefore, you are at all times responsible to obtain and use a design calculation to establish whether or not the building will be able to withstand the (extra) load at all times. Where necessary, modifications need to be made by you. Van der Valk will not accept any form of liability upon you not having obtained and used such a required design calculation.

Mounting systems for PV-panels placed on flat roofs should either be mechanically attached to the roof or need to be supported by ballast, to make sure that the solar mounting system is unable to be lifted, tipped over or slide. The required ballast weight per system shown in the tables in this manual ensures that the mounting system can be installed and used safely. In case the inclination of the roofs is 5 degrees or more, the PV-mounting system must always be mechanically fixed to the construction of the roof.

The calculations do not take into account obstacles in the near surrounding such as, for example, high buildings, cliffs and mountains. Restrictions also apply for the position of the solar mounting system on a roof. The solar panels must be installed at a certain distance from the edge of the roof: the middle zone.

The standard warranty is 10 years, which can be extended under certain conditions. The guarantee provided is subject to the guarantee conditions stated in the general terms and conditions stipulated by Van der Valk Solar Systems B.V.. Our terms and conditions shall apply to all our products at all times and can be found on our website:

[www.valksolarsystems.com](http://www.valksolarsystems.com)

Van der Valk Solar Systems B.V. does not accept any liability for any direct and/or indirect consequences of any act (or omission) ensuing from the information in or failure to observe the instructions provided in this installation manual. The use of the installation manual will at all times be subject to Dutch law.

Van der Valk Solar Systems holds the right to amend this document without further notice.

The ValkDouble mounting system is a product of:

Van der Valk Solar Systems BV

Netherlands Chamber of Commerce: 27355116

[www.valksolarsystems.com](http://www.valksolarsystems.com)

## Required ballast | The Netherlands

### General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.


Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

### Environmental factors

Position	Middle zone roof
Terrain category	Built environment
Roofing materials	Bitumen

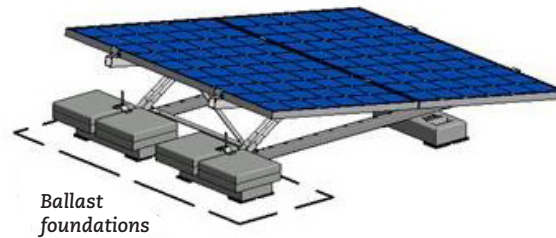

### Windmap The Netherlands

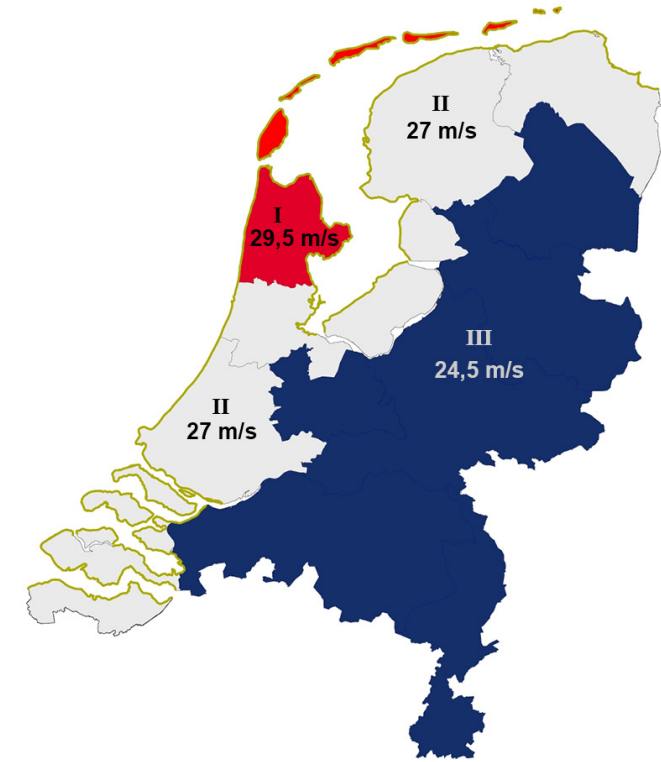

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
I (29,5 m/s)	142,0	142,0	X	X	X	kg
	16,0	16,0	X	X	X	tiles
II (27 m/s)	95,0	95,0	123,0	X	X	kg
	11,0	11,0	14,0	X	X	tiles
III (24,5 m/s)	54,0	54,0	75,0	102,0	124,0	kg
	6,0	6,0	8,5	11,5	14,0	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
I (29,5 m/s)	X	X	X	X	X	kg
	X	X	X	X	X	tiles
II (27 m/s)	127,0	127,0	X	X	X	kg
	14,5	14,5	X	X	X	tiles
III (24,5 m/s)	77,0	77,0	104,0	136,0	X	kg
	9,0	9,0	12,0	15,5	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

# Required ballast | Belgium

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;



- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.

Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position	Middle zone roof
Terrain category	III (villages, suburban terrain, permanent forest)
Roofing materials	Bitumen

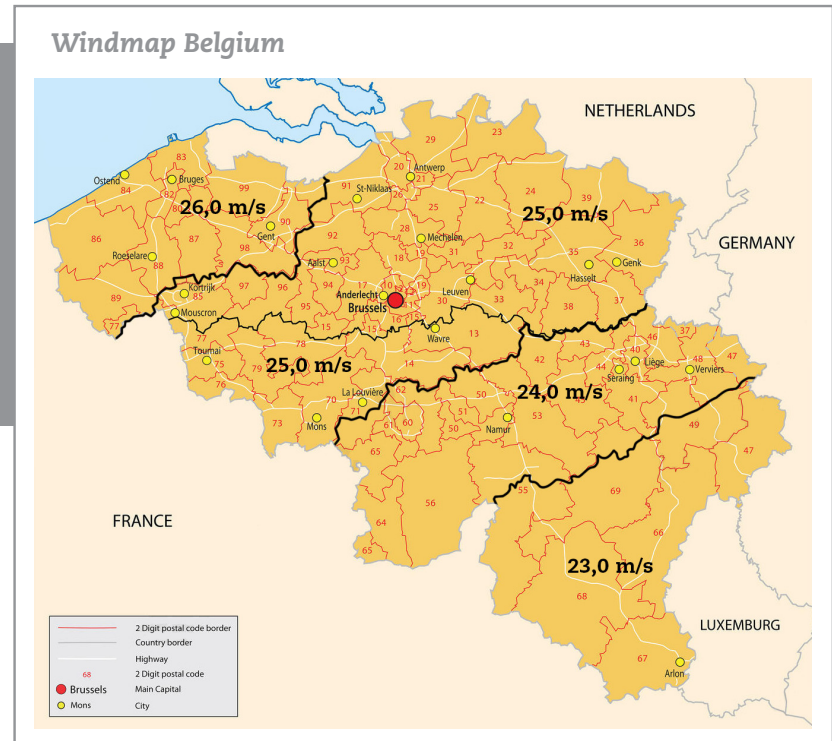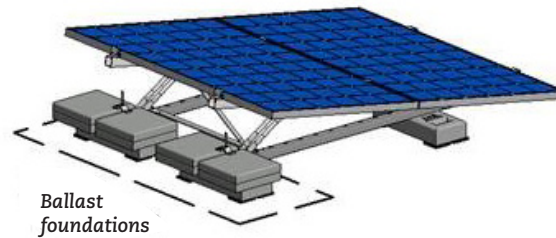

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
23 m/s	27,0	41,0	51,0	69,0	86,0	kg
	3,0	5,0	6,0	8,0	10,0	tiles
24 m/s	35,0	49,0	64,0	87,0	105,0	kg
	4,0	5,5	7,5	10,0	12,0	tiles
25 m/s	42,0	60,0	81,0	106,0	125,0	kg
	5,0	7,0	9,0	12,0	14,0	tiles
26 m/s	51,0	76,0	98,0	125,0	X	kg
	6,0	8,5	11,0	14,0	X	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
23 m/s	39,0	54,0	72,0	97,0	116,0	kg
	4,5	6,0	8,0	11,0	13,0	tiles
24 m/s	47,0	68,0	91,0	118,0	139,0	kg
	5,5	8,0	10,5	13,5	15,5	tiles
25 m/s	56,0	86,0	110,0	139,0	X	kg
	6,5	10,0	12,5	15,5	X	tiles
26 m/s	71,0	105,0	131,0	X	X	kg
	8,0	12,0	15,0	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

# Required ballast | Germany

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.


Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position Middle zone roof  
 Terrain category IV (city)  
 Height above sea level 350 m  
**Exclusief North German Lowland**  
 Roof materials Bitumen

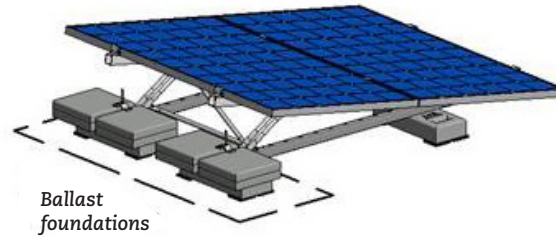

Windmap Germany

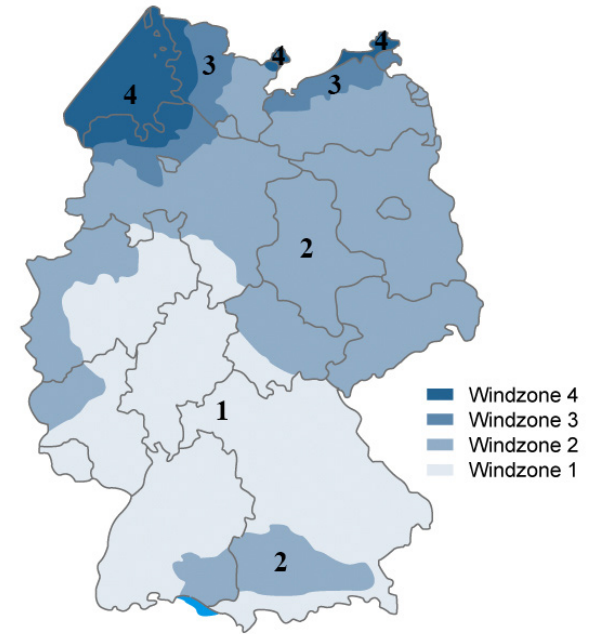

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
1 (22,5 m/s)	28,0	28,0	28,0	28,0	28,0	kg
	3,5	3,5	3,5	3,5	3,5	tiles
2 (25 m/s)	49,0	49,0	49,0	49,0	49,0	kg
	5,5	5,5	5,5	5,5	5,5	tiles
3 (27,5 m/s)	81,0	81,0	81,0	81,0	81,0	kg
	9,0	9,0	9,0	9,0	9,0	tiles
4 (30 m/s)	122,0	122,0	122,0	122,0	122,0	kg
	14,0	14,0	14,0	14,0	14,0	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
1 (22,5 m/s)	40,0	40,0	40,0	40,0	40,0	kg
	4,5	4,5	4,5	4,5	4,5	tiles
2 (25 m/s)	67,0	67,0	67,0	67,0	67,0	kg
	7,5	7,5	7,5	7,5	7,5	tiles
3 (27,5 m/s)	111,0	111,0	111,0	111,0	111,0	kg
	12,5	12,5	12,5	12,5	12,5	tiles
4 (30 m/s)	X	X	X	X	X	kg
	X	X	X	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

# Required ballast | United Kingdom

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.

Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position	Middle zone roof
Terrain category	Built environment
Height above sea level	50 m
Distance to coast line	5 km
Distance to city border	5 km
Roof materials	Bitumen

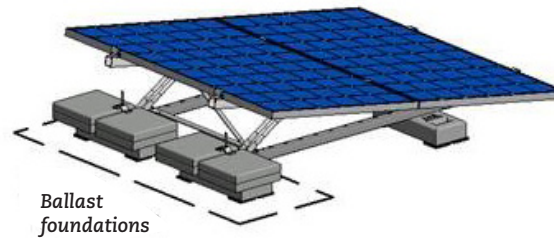


Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
22 m/s	55,0	92,0	107,0	X	X	kg
	6,5	10,5	12,0	X	X	tiles
23 m/s	71,0	113,0	130,0	X	X	kg
	8,0	13,0	14,5	X	X	tiles
24 m/s	90,0	135,0	X	X	X	kg
	10,0	15,0	X	X	X	tiles
25 m/s	109,0	X	X	X	X	kg
	12,5	X	X	X	X	tiles
26 m/s	128,0	X	X	X	X	kg
	14,5	X	X	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

## Windmap United Kingdom

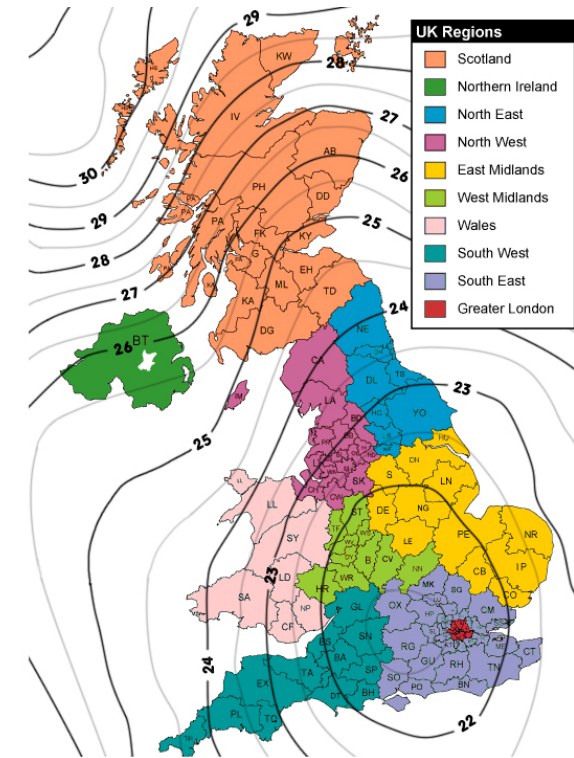

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
22 m/s	79,0	124,0	142,0	X	X	kg
	9,0	14,0	16,0	X	X	tiles
23 m/s	100,0	X	X	X	X	kg
	11,5	X	X	X	X	tiles
24 m/s	121,0	X	X	X	X	kg
	13,5	X	X	X	X	tiles
25 m/s	143,0	X	X	X	X	kg
	16,0	X	X	X	X	tiles
26 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles

# Required ballast | Ireland

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.

Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position	Middle zone roof
Terrain category	Built environment
Height above sea level	50 m
Distance to coast line	5 km
Distance to city border	5 km
Roof materials	Bitumen

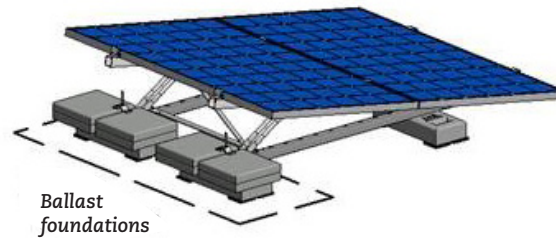

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
25 m/s	109,0	X	X	X	X	kg
	12,5	X	X	X	X	tiles
26 m/s	128,0	X	X	X	X	kg
	14,5	X	X	X	X	tiles
27 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles
28 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles


Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
25 m/s	143,0	X	X	X	X	kg
	16,0	X	X	X	X	tiles
26 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles
27 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles
28 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

## Windmap Ireland

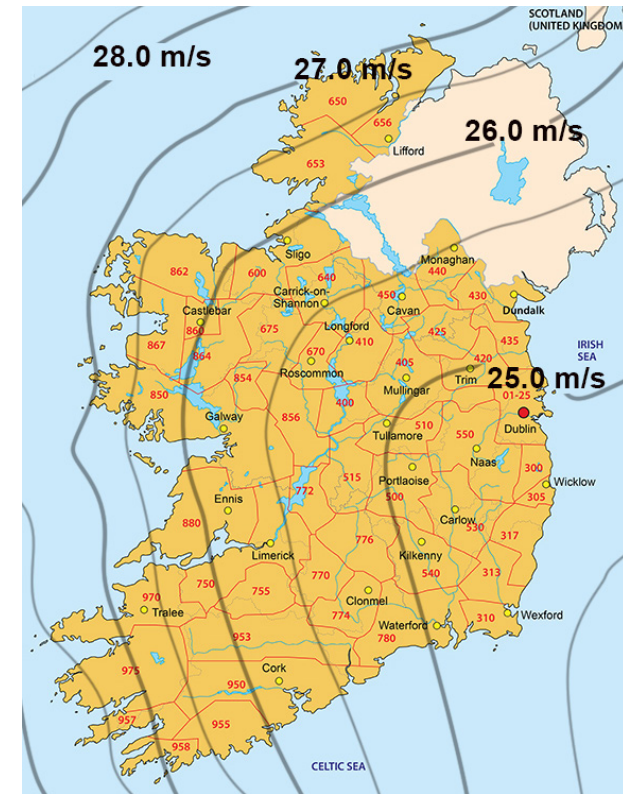



## Required ballast | Norway

### General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.

Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

### Environmental factors

Position	Middle zone roof
Terrain category	III (villages, suburban terrain, permanent forest)
Height above sea level	175 m
Roofing materials	Bitumen

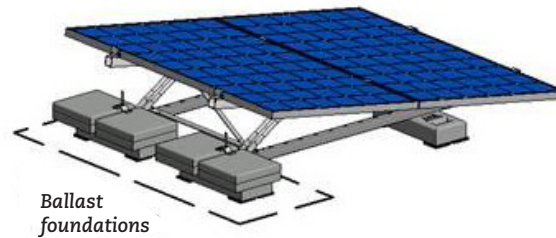

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
22 m/s	44,0	44,0	49,0	65,0	82,0	kg
	5,0	5,0	5,5	7,5	9,5	tiles
25 m/s	86,0	86,0	97,0	123,0	144,0	kg
	10,0	10,0	11,0	14,0	16,0	tiles
27 m/s	123,0	123,0	135,0	X	X	kg
	14,0	14,0	15,0	X	X	tiles
29 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles
31 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
22 m/s	59,0	59,0	68,0	92,0	112,0	kg
	7,0	7,0	8,0	10,5	10,5	tiles
25 m/s	117,0	117,0	129,0	X	X	kg
	13,0	13,0	14,5	X	X	tiles
27 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles
29 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles
31 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

### Windmap Norway



For determining the wind area see next page.

# Wind area | Norway

	m/s		m/s		m/s		m/s		m/s		m/s
<b>Provincie Østfold</b>	<b>22</b>	Nore og Uvdal	24	Sokndal	27	Flora	28	<b>Provincie Nord-Trøndelag</b>	<b>26</b>	<b>Provincie Troms</b>	<b>26</b>
<i>Except Municipalities:</i>		Nore og Uvdal near Hordeland	24	Bokn	28	Gulen	28	<i>Except Municipalities:</i>		<i>Except Municipalities:</i>	
Halden	24	Ål	24	Haugesund	28	Bremanger	29	Lierne	24	Bardu	24
Moss	24	Ål near Sogn og Fj.	24	Klepp	28	Bremanger near the Ålfotbreen	29	Meråker	25	Målselv	24
Rygge	24	<b>Provincie Vestfold</b>	<b>23</b>	Randaberg	28	Solund	29	Røyrvik	25	Stroffjord	24
Råde	24	<i>Except Municipalities:</i>		Rennesøy	28	Selje	31	Snåsa	25	Gáivuona/Káfjord	25
Sarpsborg	24	Hof	22	Sola	28	Vågsøy	31	Flatanger	29	Balsfjord	26
Våler	24	Lardal	22	Time	28	<b>Provincie Møre og Romsdal</b>	<b>30</b>	Fosnes	29	Gratangen	26
Fredrikstad	26	Nøtterøy	24	Hå	29	<i>Except Municipalities:</i>		Leka	29	Ibestad	26
Hvaler	27	Sandefjord	24	Kvitsøy	29	Rindal	25	Leka on the mainland	29	Lavangen	26
<b>Provincie Akershus</b>	<b>22</b>	Stokke	24	Karmøy	30	Surnadal	25	Nærøy	29	Lyngen	26
<i>Except Municipality:</i>		Tønsberg	24	Ølen	Municipality isn't in the Wind standard	Nesset	26	Vikna	30	Salangen	26
Vestby	24	Larvik	25	<b>Provincie Hordaland</b>	<b>26</b>	Norddal	26	<b>Provincie Nordland</b>	<b>29</b>	Skånland	26
<b>Provincie Oslo</b>	<b>22</b>	Tjøme	26	<i>Except Municipalities:</i>		Stordal	26	<i>Except Municipalities:</i>		Sørreisa	26
<b>Provincie Hedmark</b>	<b>22</b>	<b>Provincie Telemark</b>	<b>22</b>	Etne	24	Stranda	26	Beiam	26	Dyrøy	27
<i>Except Municipalities:</i>		<i>Except Municipalities:</i>		Etne near the Folgefonna	24	Sunndal	27	Harstad	27	Harstad	27
Alvdal	24	Bamble	23	Granvin	24	Gjemnes	28	Evenes	26	Lenvik	27
Folldal	24	Porsgrunn	23	Kvam	24	Rauma	28	Fauske	26	Nordreisa	27
Folldal near Trøndelag	24	Fyresdal	24	Modalen	24	Sykkylven	28	Grane	26	Tranøy	27
Os	24	Kragerø	24	Samnanger	24	Tingvoll	28	Hattfjelldal	26	Tromsø	27
Os near Trøndelag	24	Tinn	24	Ulvik	24	Volda	28	Hemnes	26	Bjarkøy	28
Tolga	24	Tokke	24	Vaksdal	24	Ørskog	28	Rana	26	Kvænangen	28
Tynset	24	Vinje	24	Voss	24	Ørsta	28	Saltdal	26	Skjervøy	28
Tynset Kvikne	24	Vinje near Rogaland/Hordaland	24	Osterøy	25	Eide	29	Sørfold	26	Karlsøy	29
Tynset near Trøndelag	24	<b>Provincie Aust-Agder</b>	<b>24</b>	Radøy	27	Halsa	29	Ballangen	27	Berg	30
<b>Provincie Oppland</b>	<b>22</b>	<i>Except Municipalities:</i>		Austevoll	28	Hareid	29	Tjeldsund	27	Torsken	30
<i>Except Municipalities:</i>		Arendal	26	Austrheim	28	Molde	29	Tysfjord	27	<b>Provincie Finnmark</b>	<b>29</b>
Vågå	23	Grimstad	26	Bømlo	28	Skodje	29	Hamarøy	28	<i>Except Municipalities:</i>	
Dovre	24	Lillesand	26	Fjell	28	Sula	29	Narvik	28	Karájoga / Karasjok	24
Dovre near Trøndelag	24	Risør	26	Sund	28	Ålesund	29	Sortland	28	Guovdageaidnu / Kautokeino	24
Lom	24	Tvedestrand	26	Øygarden	29	Sandøy	31	Vefsn	28	Deanu/Tana	27
Lom near Sogn og Fj.	24	<b>Provincie Vest-Agder</b>	<b>24</b>	Fedje	30	Frei	Municipality isn't in the Wind standard	Vefsn along the fjord	28	Porsanger	27
Vang	24	<i>Except Municipalities:</i>		<b>Provincie Sogn og Fjordane</b>	<b>24</b>	Tustna	Municipality isn't in the Wind standard	Vefsn Mosjøen	28	Unjárgga / Nesseby	27
Vang near Sogn og Fj.	24	Flekkefjord	26	<i>Except Municipalities:</i>		<b>Provincie Sør-Trøndelag</b>	<b>25</b>	Vevelstad	28	Alta	28
Lesja	25	Flekkefjord near Rogaland	26	Aurland	25	<i>Except Municipalities:</i>		Alstahaug	30	Berlevåg	30
Lesja near Trøndelag/		Kristiansand	26	Eid	26	Malvik	26	Bindal	30	Gamvik	30
Møre og Romsdal	25	Lyngdal	26	Fjaler	26	Oppdal	26	Bindal	30	Hasvik	30
Skjåk	25	Søngne	26	Førde	26	Rennebu	26	Bodø	30	Måsøy	30
Skjåk near Sogn og Fj./		Farsund	28	Førde near the Jostedalsbreen	26	Trondheim	26	Dønna	30	Nordkapp	30
Møre og Romsdal	25	Lindesnes	28	Gaular	26	Agdenes	27	Flakstad	30	Vardø	30
<b>Provincie Buskerud</b>	<b>22</b>	Mandal	28	Gloppen	26	Rissa	27	Herøy	30	<b>Provincie Svalbard</b>	<b>30</b>
<i>Except Municipalities:</i>		<b>Provincie Rogaland</b>	<b>26</b>	Gloppen near the Ålfotbreen and		Snillfjord	27	Leirfjord	30	<i>Except Municipalities:</i>	
Hemsedal	24	<i>Except Municipalities:</i>		Jostedalsbreen	26	Hemne	28	Lurøy	30	Skjerstad	Municipality isn't in the Wind standard
Hemsedal near Sogn og Fj.	24	Hjelmeland	24	Hornindal	26	Bjugn	29	Lurøy on the mainland	30		
Hol	24	Sauda	24	Hyllestad	26	Roan	29	Nesna	30		
Hol near Hordeland /		Suldal	24	Høyanger	26	Áfjord	29	Sømna	30		
Sogn og Fjordane	24	Vindafjord	24	Lærdal	26	Frøya	30	Vega	30		
Hurum	24	Eigersund	27	Naustdal	26	Hitra	30	Vestvågøy	30		
				Askvoll	28	Ørland	30	Andøy	31		
								Moskenes	31		
								Røst	31		
								Træna	31		
								Værøy	31		
								Skjerstad	Municipality isn't in the Wind standard		

# Required ballast | Sweden

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.

Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position	Middle zone roof
Terrain category	III (villages, suburban terrain, permanent forest)
Roofing materials	Bitumen

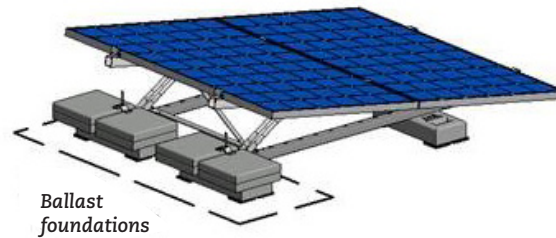

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
22 m/s	11,0	23,0	31,0	42,0	51,0	kg
	1,5	3,0	3,5	5,0	6,0	tiles
23 m/s	18,0	30,0	40,0	51,0	63,0	kg
	2,0	3,5	4,5	6,0	7,0	tiles
24 m/s	25,0	38,0	48,0	64,0	81,0	kg
	3,0	4,5	5,5	7,5	9,0	tiles
25 m/s	32,0	46,0	58,0	81,0	99,0	kg
	4,0	5,5	6,5	9,0	11,0	tiles
26 m/s	39,0	55,0	74,0	98,0	118,0	kg
	4,5	6,5	8,5	11,0	13,5	tiles

## Windmap Sweden



Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
22 m/s	20,0	33,0	44,0	56,0	71,0	kg
	2,5	4,0	5,0	6,5	8,0	tiles
23 m/s	28,0	42,0	53,0	72,0	90,0	kg
	3,5	5,0	6,0	8,0	10,0	tiles
24 m/s	36,0	51,0	67,0	91,0	111,0	kg
	4,0	6,0	7,5	10,5	12,5	tiles
25 m/s	44,0	62,0	84,0	111,0	132,0	kg
	5,0	7,0	9,5	12,5	15,0	tiles
26 m/s	52,0	79,0	103,0	131,0	154,0	kg
	6,0	9,0	11,5	15,0	nb	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

# Required ballast | Finland

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.

Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position	Middle zone roof
Terrain category	III (villages, suburban terrain, permanent forest)
Roofing materials	Bitumen

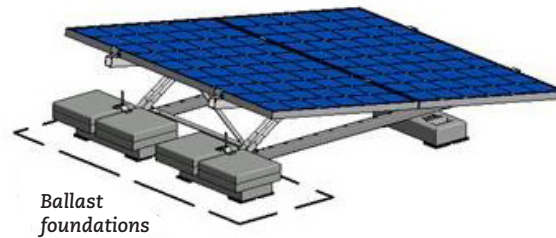

## Windmap Finland

- 
- Mainland across the country = 21 m/s
  - Sea areas:  
Open sea, scattered islands on open sea = 22 m/s
  - In Lapland: at the **top** of the mountains = 26 m/s
  - In Lapland: at the **foot** of the mountains = 21 m/s

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
21 m/s	27,0	40,0	51,0	68,0	84,0	kg
	3,0	4,5	6,0	8,0	9,5	tiles
22 m/s	35,0	50,0	65,0	87,0	106,0	kg
	4,0	6,0	7,5	10,0	12,0	tiles
26 m/s	82,0	117,0	143,0	X	X	kg
	9,5	13,0	16,0	X	X	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
21 m/s	38,0	54,0	71,0	95,0	115,0	kg
	4,5	6,0	8,0	11,0	13,0	tiles
22 m/s	48,0	69,0	92,0	118,0	139,0	kg
	5,5	8,0	10,5	13,5	15,5	tiles
26 m/s	112,0	X	X	X	X	kg
	12,5	X	X	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

## Required ballast | Poland

### General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.

Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

### Environmental factors

Position	Middle zone roof
Terrain category	III (villages, suburban terrain, permanent forest)
Roofing materials	Bitumen

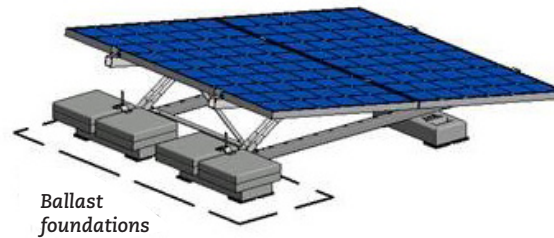

### Windmap Poland



Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
1	46,0	55,0	67,0	83,0	96,0	kg
	5,5	6,5	7,5	9,5	11,0	tiles
2	107,0	129,0	X	X	X	kg
	12,0	14,5	X	X	X	tiles
3	46,0	55,0	67,0	83,0	96,0	kg
	5,5	6,5	7,5	9,5	11,0	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
1	62,0	80,0	95,0	113,0	128,0	kg
	7,0	9,0	11,0	13,0	14,5	tiles
2	141,0	X	X	X	X	kg
	16,0	X	X	X	X	tiles
3	62,0	80,0	95,0	113,0	128,0	kg
	7,0	9,0	11,0	13,0	14,5	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

# Required ballast | Spain

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.


Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position	Middle zone roof
Terrain category	III (villages, suburban terrain, permanent forest)
Height above sea level	< 1000 m
Roofing materials	Concrete

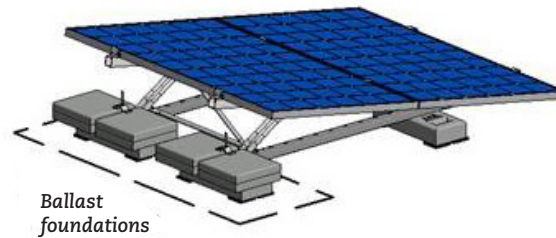

## Windmap Spain

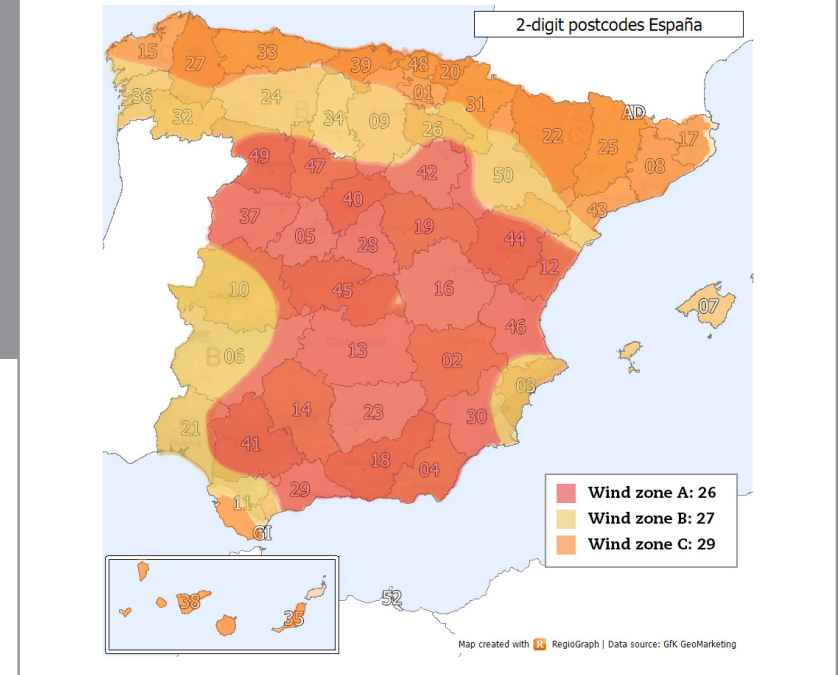

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
26 m/s	89,0	104,0	130,0	X	X	kg
	10,0	12,0	14,5	X	X	tiles
27 m/s	107,0	123,0	X	X	X	kg
	12,0	14,0	X	X	X	tiles
29 m/s	144,0	X	X	X	X	kg
	16,0	X	X	X	X	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
26 m/s	121,0	138,0	X	X	X	kg
	13,5	15,5	X	X	X	tiles
27 m/s	141,0	X	X	X	X	kg
	16,0	X	X	X	X	tiles
29 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

# Required ballast | Portugal

## General

The ValkDouble® mounting system must be reinforced by means of tiles, which must be placed on the indicated ballast foundations. In three steps you can easily calculate the required ballast;


- determine the wind area on the windmap
- choose the wind area and building height in the table
- you can now read the number of tiles / kg

Note 1: The extra ballast must be equally divided over the ballast foundations.


Note 2: The max. of 16 tiles can be placed for extra ballast (144 kg).

## Environmental factors

Position	Middle zone roof
Terrain category	III (villages, suburban terrain, permanent forest)
Height above sea level	< 1000 m
Roofing materials	Concrete

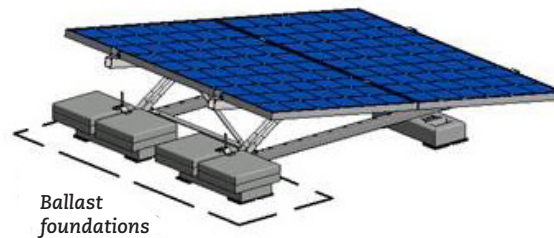

## Windmap Portugal

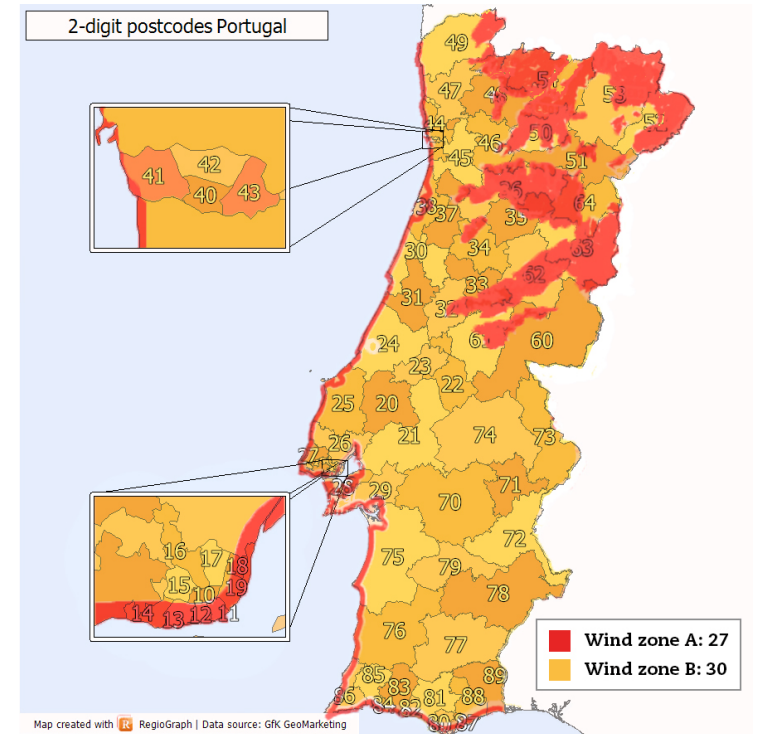

Panel: maximum dimensions 1800x1100 mm (21 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
27 m/s	107,0	123,0	X	X	X	kg
	12,0	14,0	X	X	X	tiles
30 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles

Panel: maximum dimensions 2100x1100 mm (24 kg)

Building height	0 - 5 meter	5 - 7 meter	7 - 9 meter	9 - 12 meter	12 - 15 meter	
27 m/s	141,0	X	X	X	X	kg
	16,0	X	X	X	X	tiles
30 m/s	X	X	X	X	X	kg
	X	X	X	X	X	tiles

X = the required ballast is higher than will fit under the system. The system must be mechanically attached to the roof. Please contact Van der Valk Solar Systems.

\* If you use tiles of different sizes and thus another weight, you need to adjust the number of tiles to get the right weight.

# Recommended installation tools

## ValkDouble


VAN DER VALK



SOLAR SYSTEMS




Cordless drill  
(for socket 13 and bit T-30)

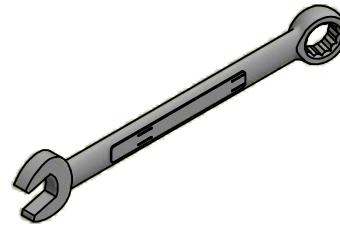

Wrench 13



Socket 13

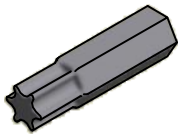

Torx bit T-30





Measuring tape




# Required materials


## ValkDouble

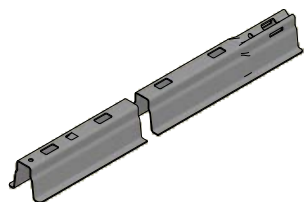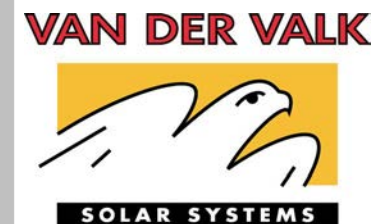

Roof carrier profile (741801600)  
Installation: Page 01

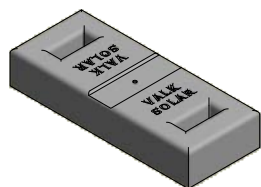

Concrete mass block (750520)  
Installation: Page 01



Rubber tile carrier (729610)  
Installation: Page 01



SS bolt M8x65 (774065)  
Installation: Page 01



SS washer M8 125A (774009)  
Installation: Page 01




Threaded rod M8x220 (7479740)  
Installation: Page 01



SS flange nut M8 (774006)  
Installation: Page 01/03/04/05/06




A-frame connector (724420)  
Installation: Page 02

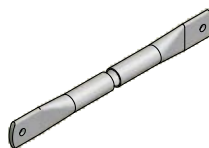


Alu. support (G13032208250000)  
Installation: Page 03



Hammerheadbolt M8x20 (774220)  
Installation: Page 03

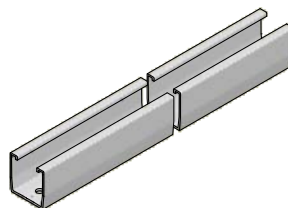

Alu. profile 2100mm (7272100)  
Alu. extension profile:  
757050 = 1010-1046 mm  
757051 = 1038-1065 mm  
757052 = 1065-1100 mm  
Installation: Page 04

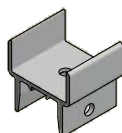

Alu. hinge 50mm (724450)  
Installation: Page 04




A-frame connector (724414)  
Installation: Page 04




SS bolt M8x20 (774020)  
Installation: Page 04




SS bolt M8x80 (774081)  
Installation: Page 04

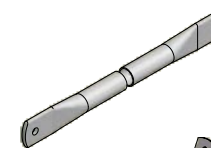


Alu. support (G13057703500000)  
Installation: Page 05

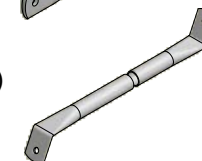


Alu. support (G13032208506565)  
Installation: Page 05




Alu. tile clamp (725140)  
Installation: Page 06

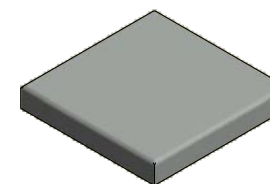

Ballast tile (7506303045)  
Installation: Page 06  
Not included in kit








End clamp (721552)  
Installation: Page 07



Panel clamp (721550)  
Installation: Page 08






Cable clamp (732001)  
Installation: Page 09

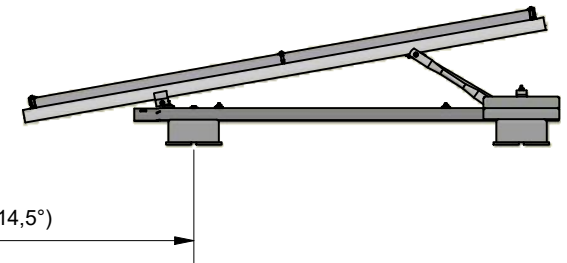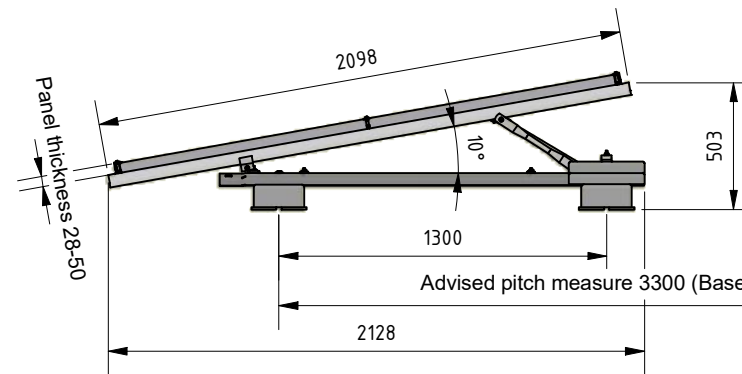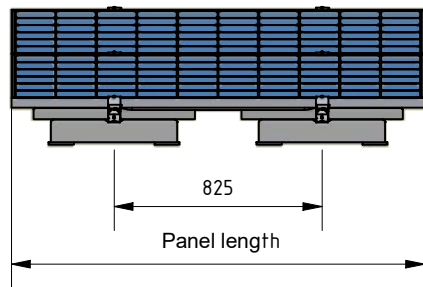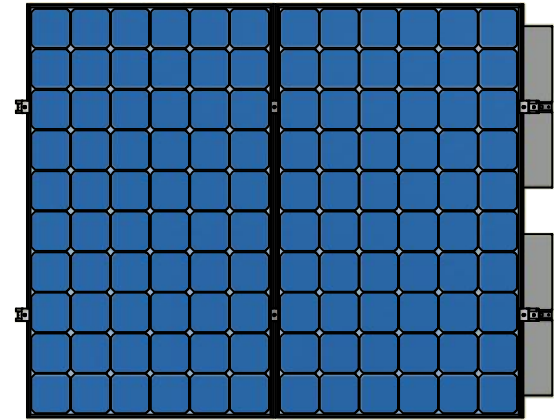
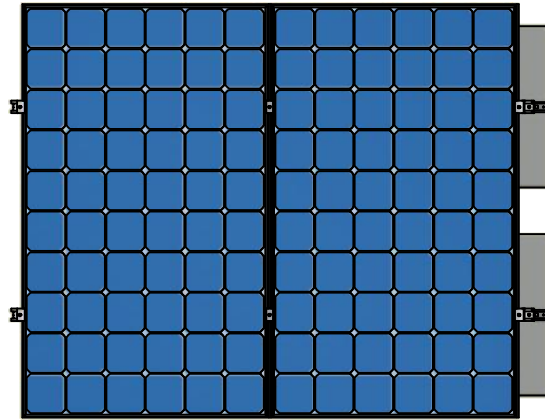


### Valk Hint!

1) Place the mass block on the correct locations before mounting the roof carriers.

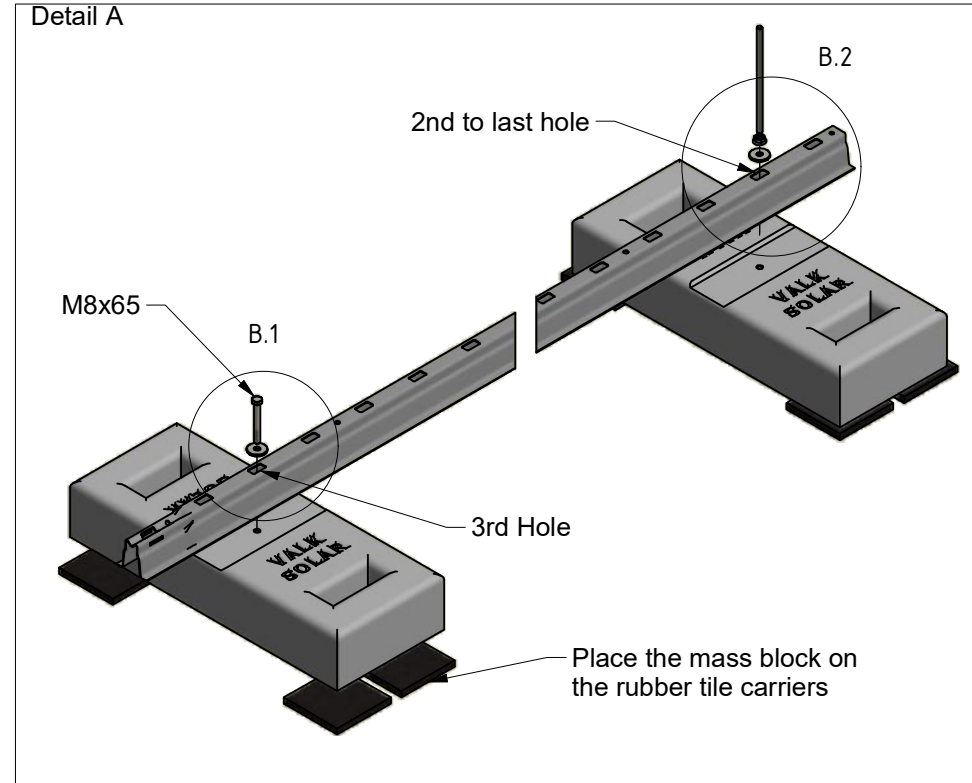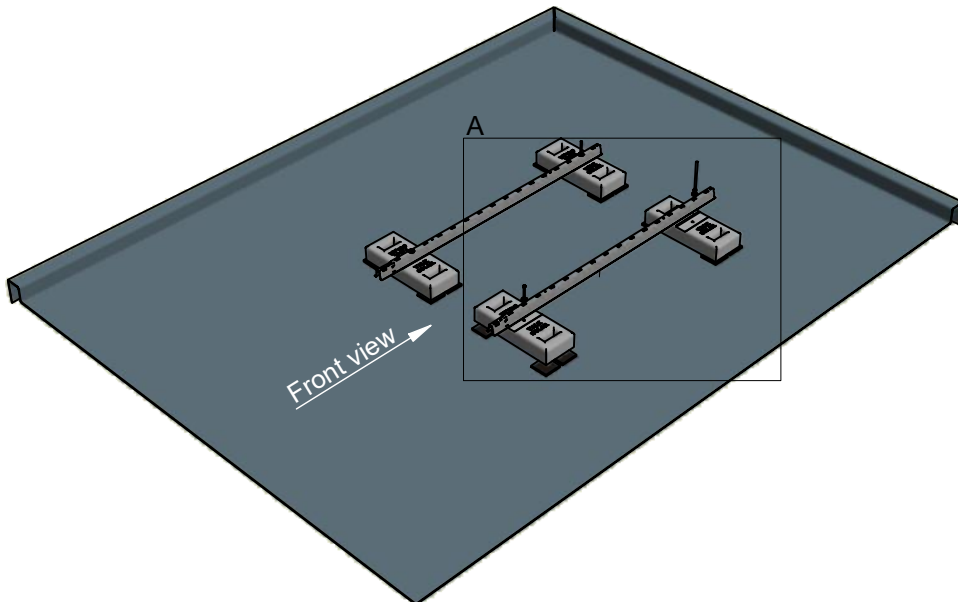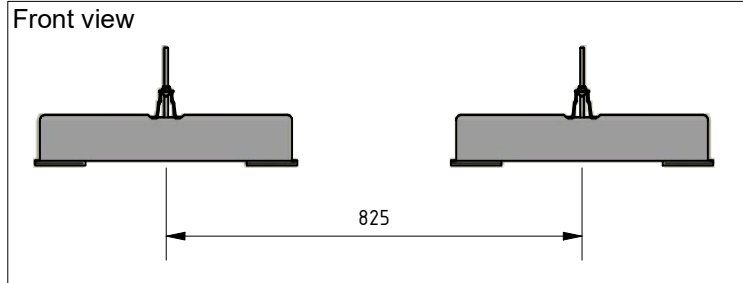


Mount the mass blocks to the roof carriers in the correct positions.

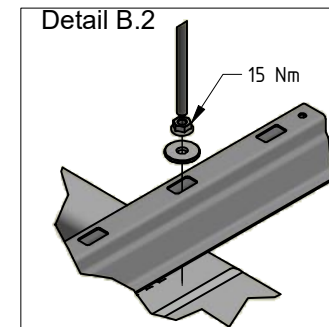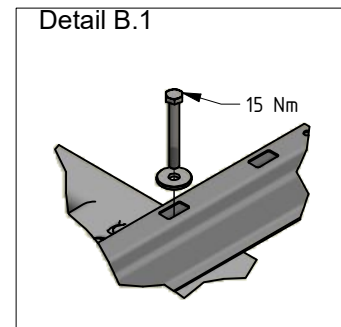






Detail A

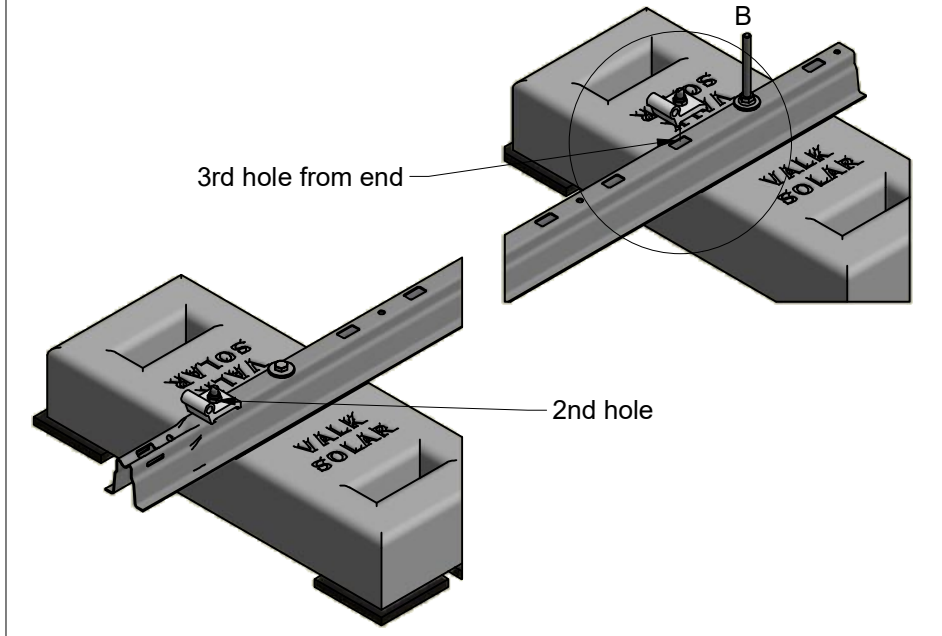


Detail B

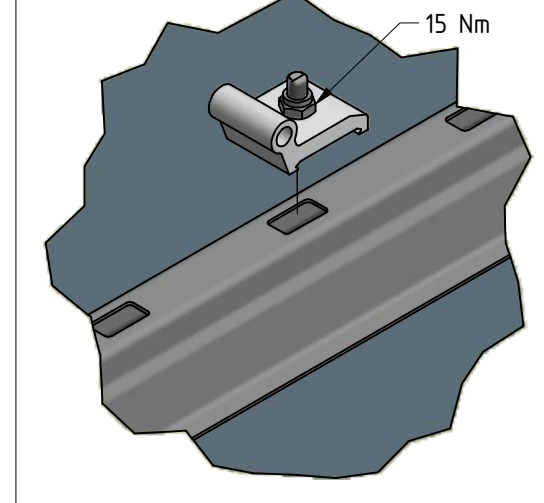




Mount the connector pieces to the roof carriers. Make sure they are placed as shown in the drawing.

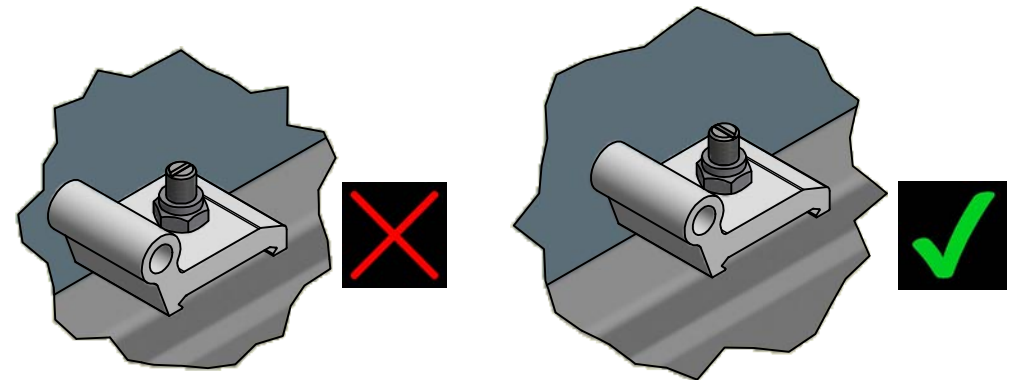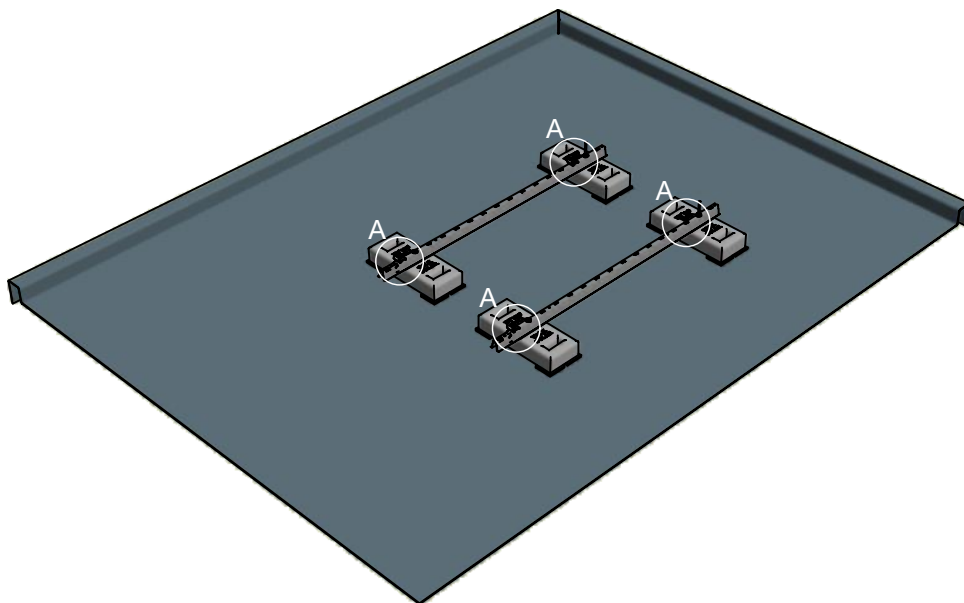

The groove on the bolt corresponds with the orientation of the bolt head!

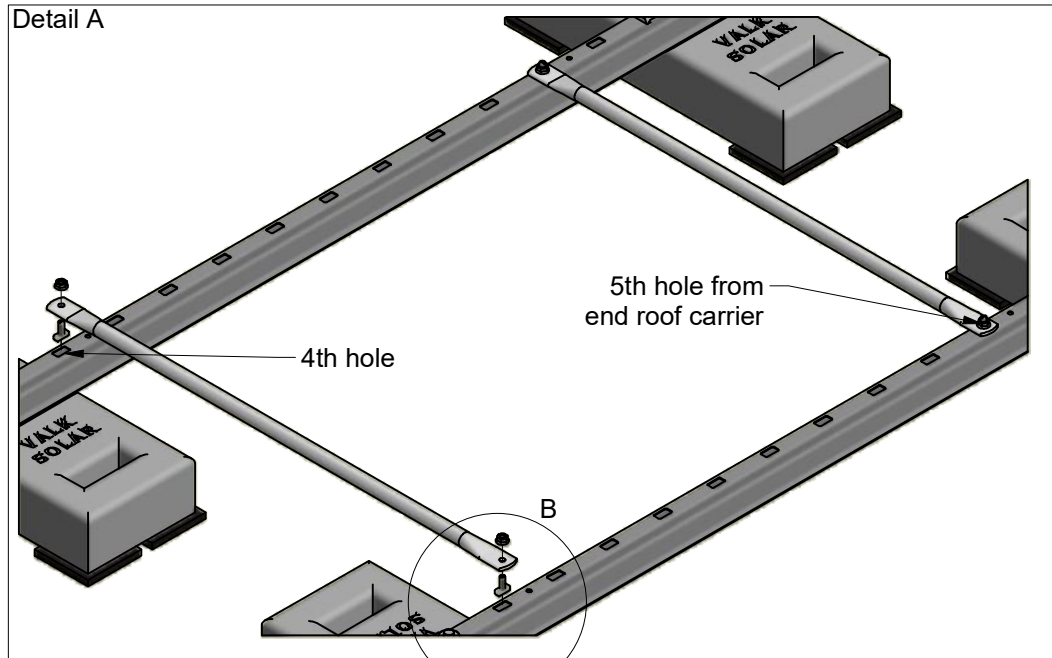


Mount the push rods on the roof carriers to connect the two rows.

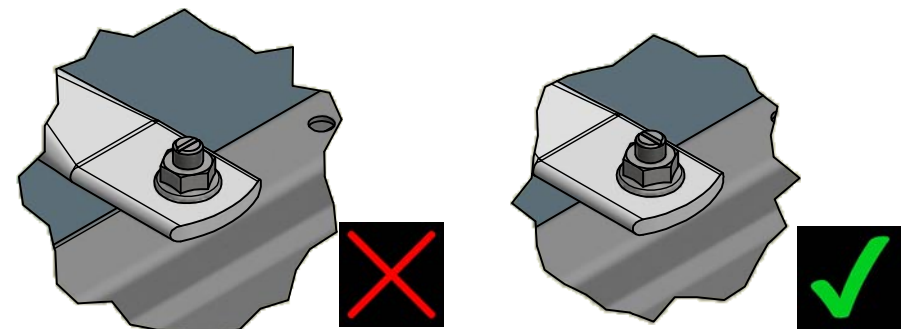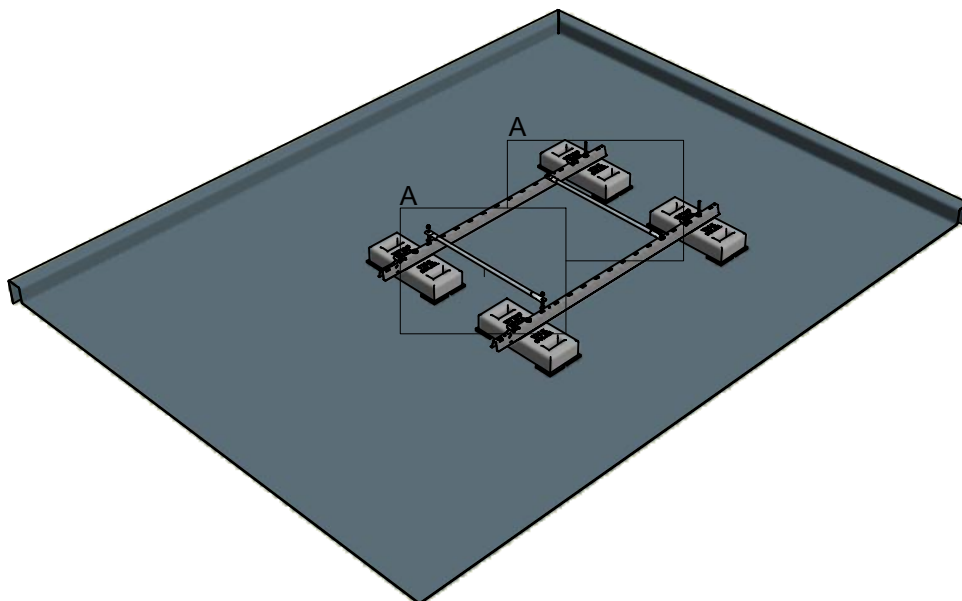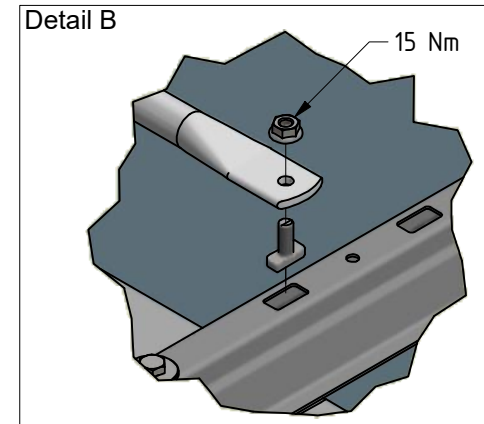


The groove on the bolt corresponds with the orientation of the bolt head!



Detail A.1

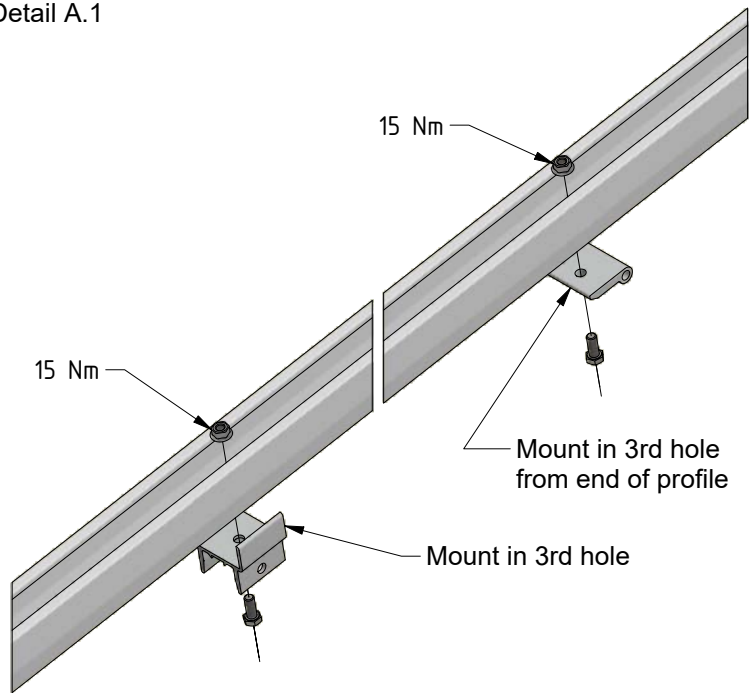


Detail A.2

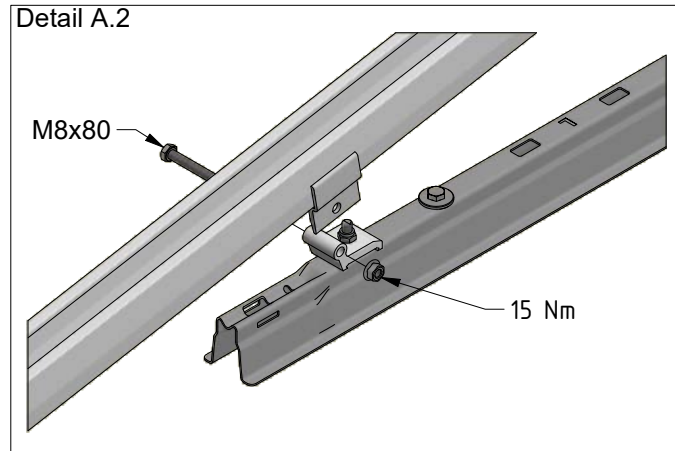


**ValkHint!!**

Create the Aluminium profile with the connector pieces first. Then mount the profile to the roof carrier.


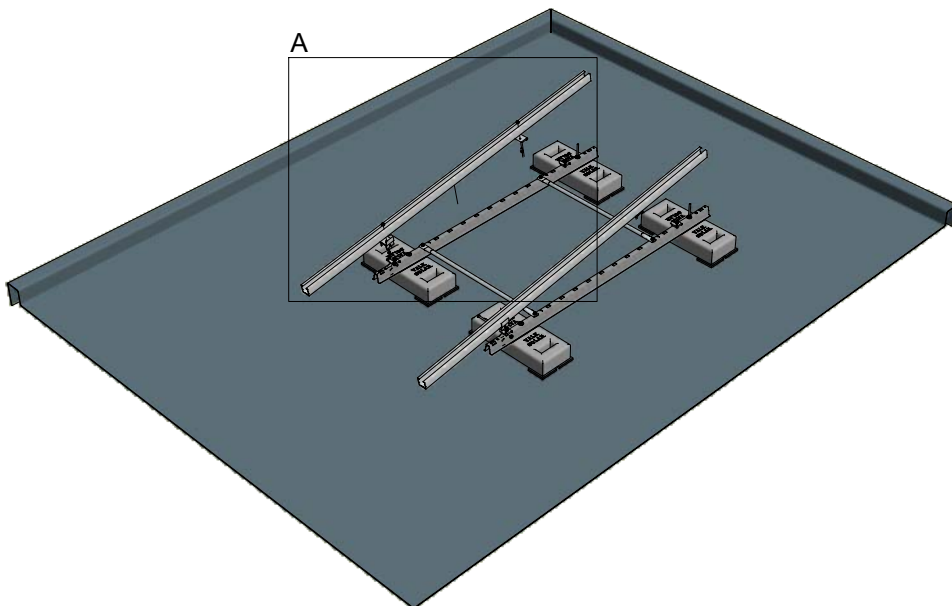




Detail A

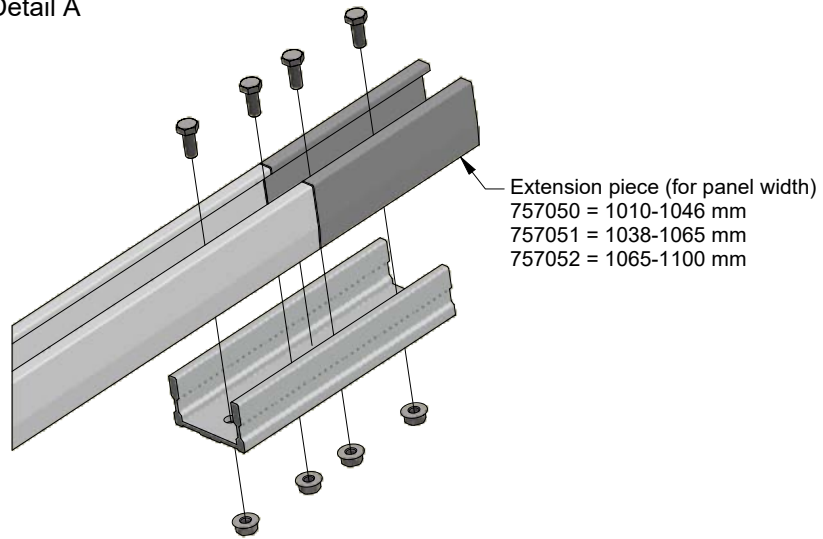


Side view

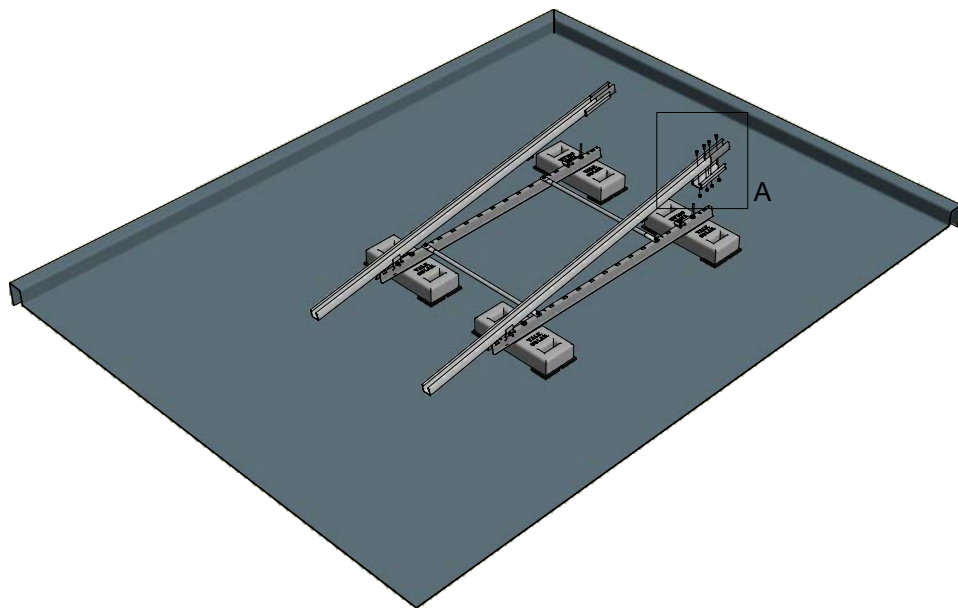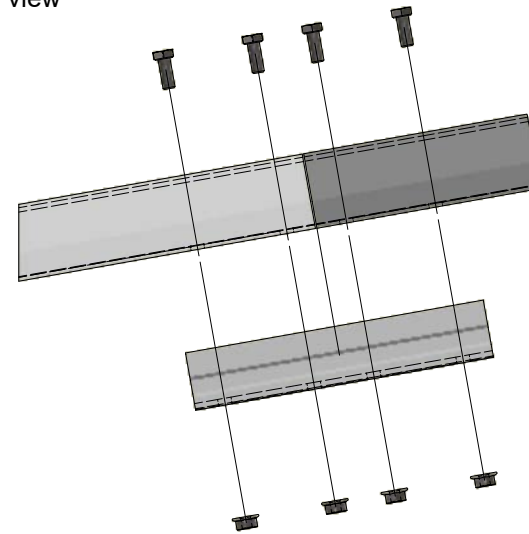










Detail A

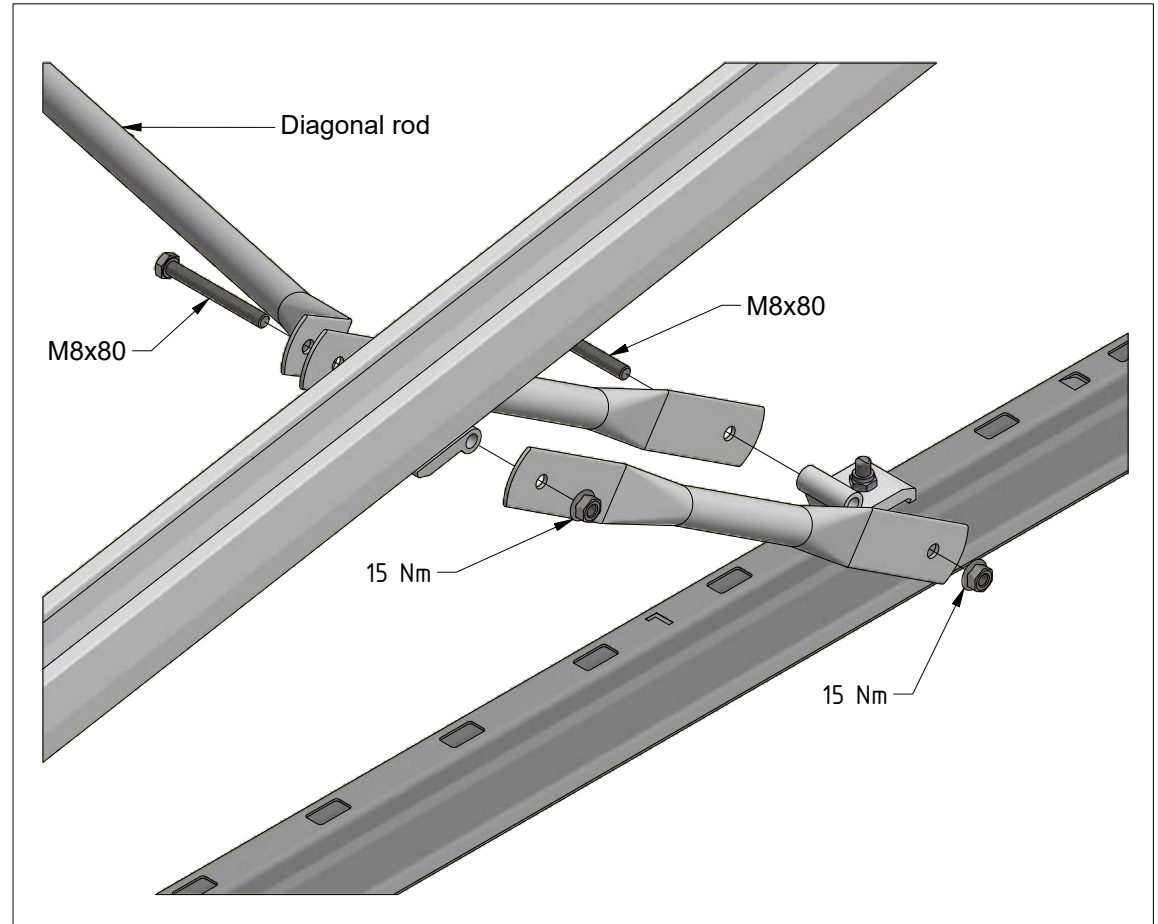

Mount the push rods to the aluminium profile and the roof carriers.

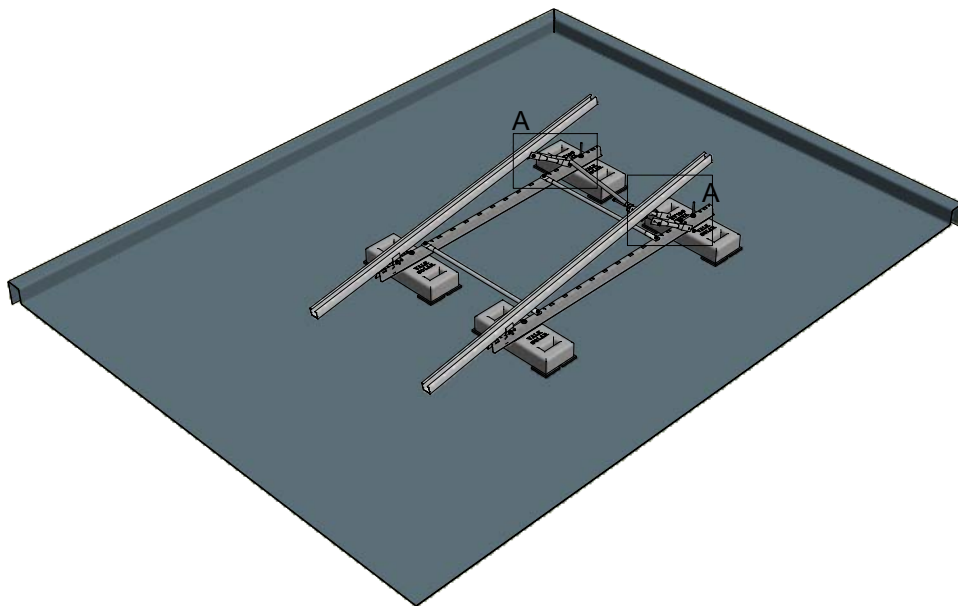




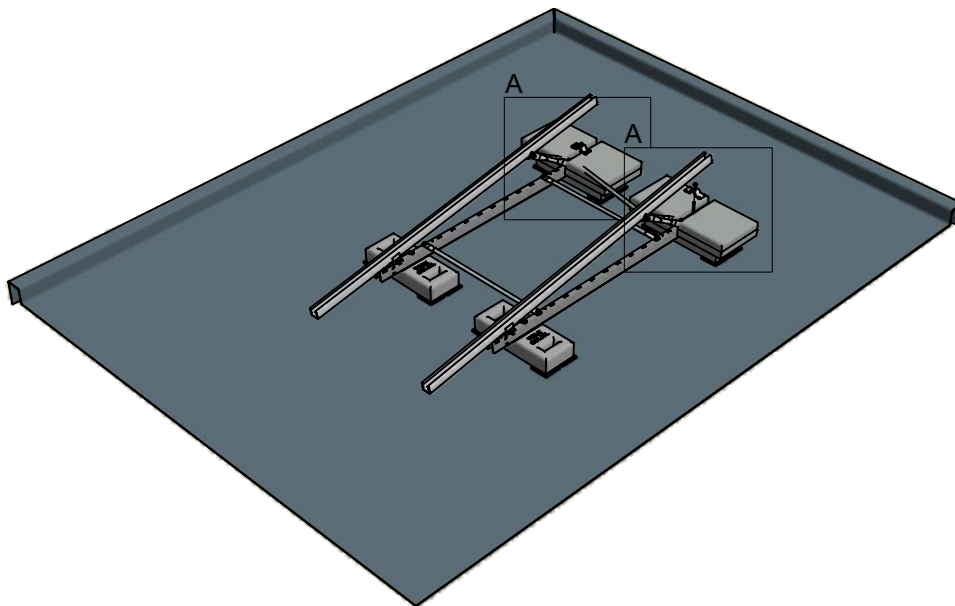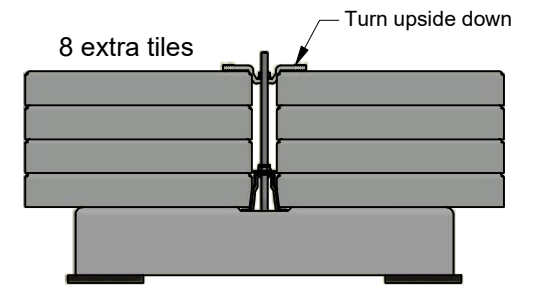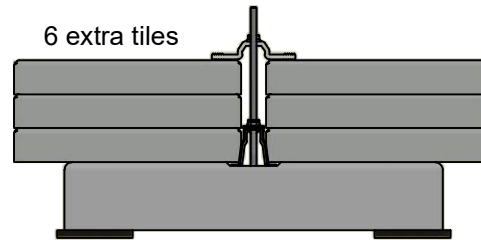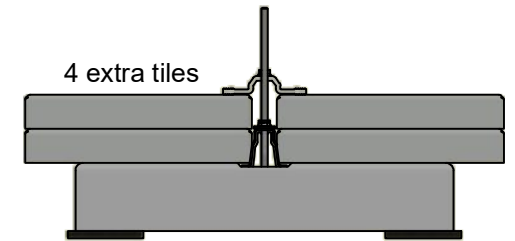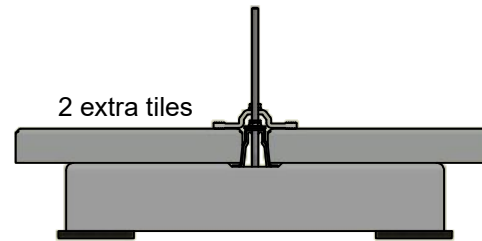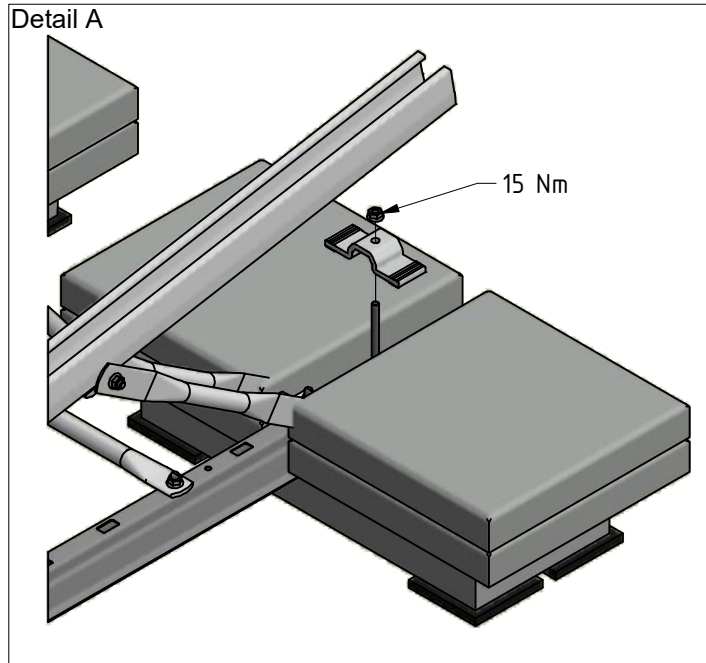

For the required number of tiles check the ballast tables in front of this manual.




Step 1

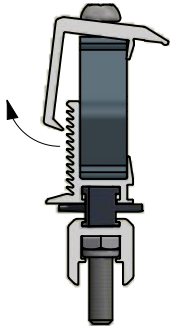


Take the end clamp out of its slot for an easier assembly.

Step 2

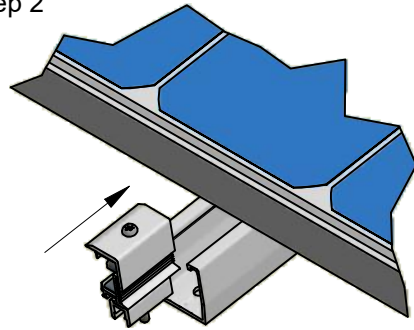


Step 3

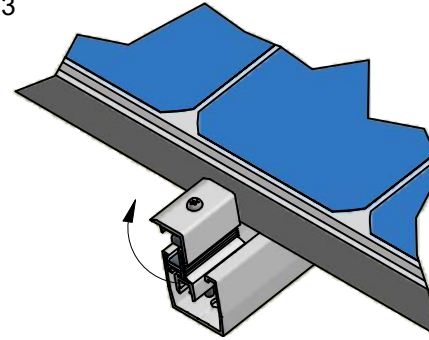



The end clamp can only be turned clockwise, so make sure the end clamp is placed the right way.



Step 4

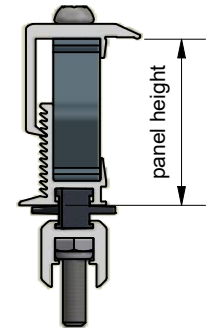




Put the end clamp in the right slot to continue the assembly.

Step 5

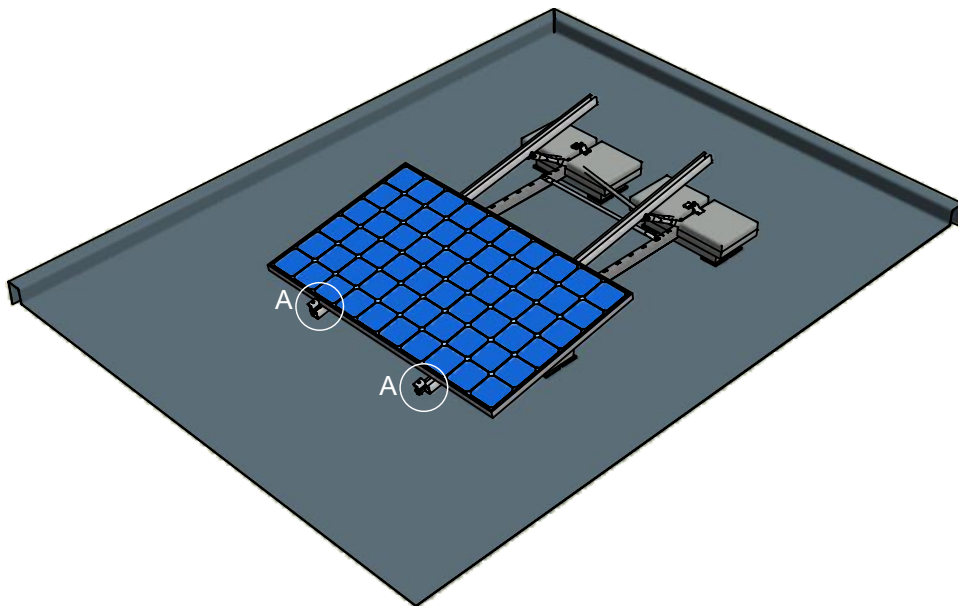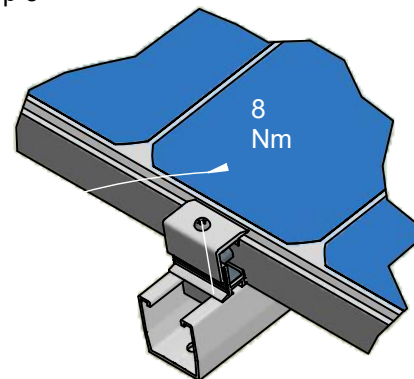

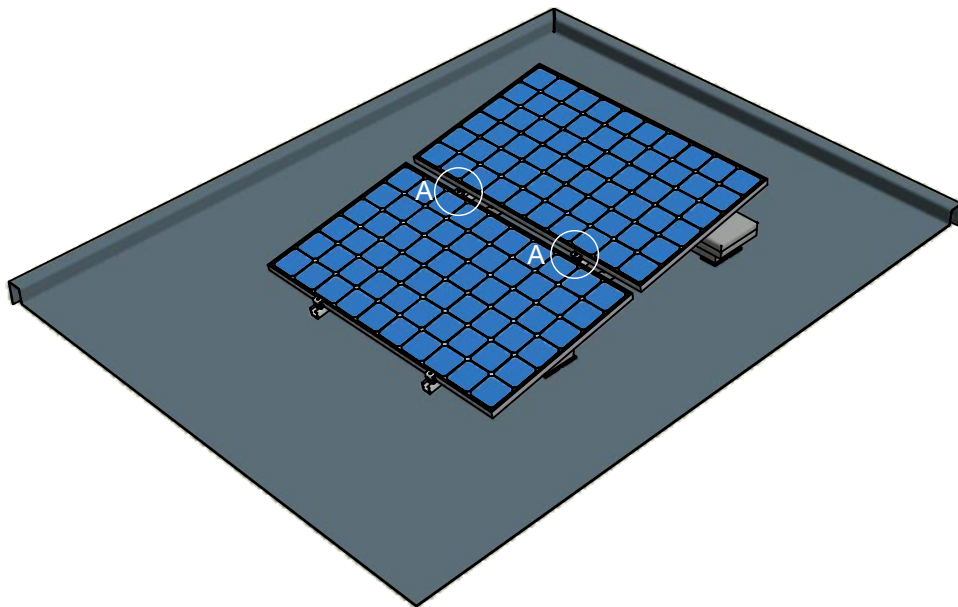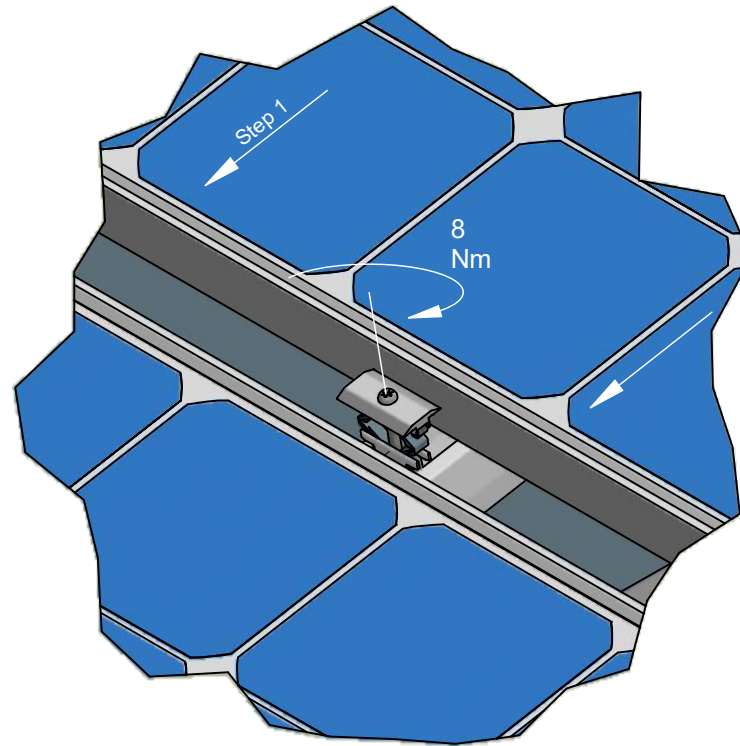

Attention!! Do not forget to install the end clamps above the second panel (Same installation as other end clamps, page 07)

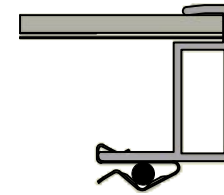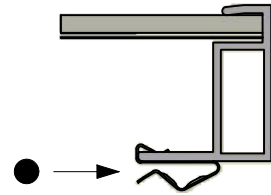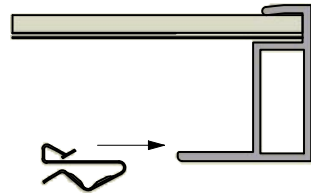

Mount cable clamp on the panel.

